




**For SAFE and EFFECTIVE operation, please read the complete starting instructions in the Owner's Manual before use.**



- If your unit is NEW add 3 oz. of oil to the crankcase, 3 oz. of oil is included in the carton
- Add straight gasoline to gas tank—**NOT FUEL/OIL (2-CYCLE) MIX**

**COLD STARTING-** Here are a few helpful hints to get you started.

**1**

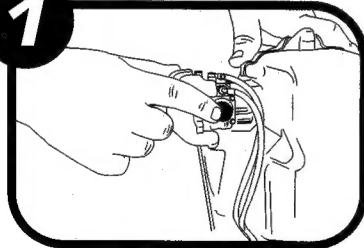


1. Set unit on flat surface. Push primer bulb firmly 8 to 15 times.

(15 primes for a new engine or an engine not started in a long time)




**2**

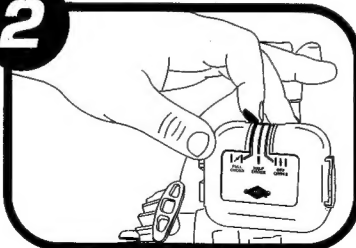

2. Move Red Choke Lever to the FULL CHOKE position.




**3**

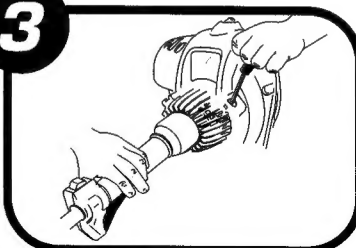

3. Squeeze throttle trigger firmly and pull starter handle sharply until engine runs.


**4**

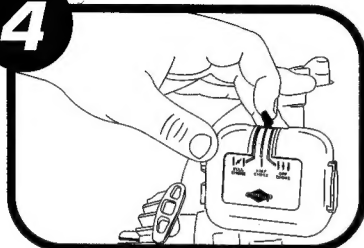

4. Wait 5 to 10 seconds then move the Red Choke Lever to HALF CHOKE position.




**5**

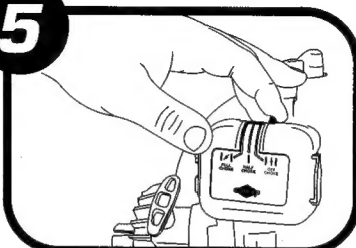

5. Run the unit at Half Choke for 20 seconds. Move the choke lever to OFF CHOKE and run the unit for 20 more seconds. Colder temperatures may require a longer warm up time.




**6**

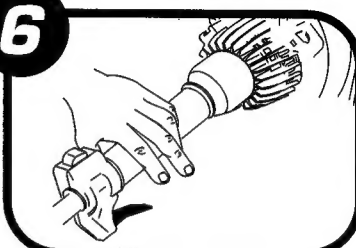


6. Release the throttle trigger-engine will go to idle speed.

**WARM STARTING-** Same as cold engine starting except ITEM 3. DO NOT SQUEEZE TRIGGER- START AT IDLE SPEED.


**HOW TO-** Here are a few helpful hints to help you replace the line on your trimmer.

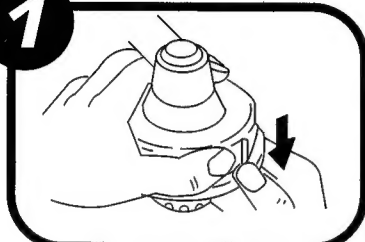**1**


1. For replacement line, use a diameter of .095 in. (2.4 mm). CS-16 takes up to 10 ft., SS-18 & BC-8 take up to 20 ft. Avoid using a larger line as it may cut down the trimming performance.

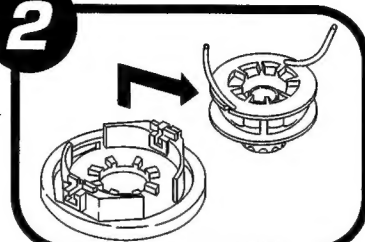**2**


2. Pinch the slotted area on both sides of the spool housing to unhook the bottom cap.

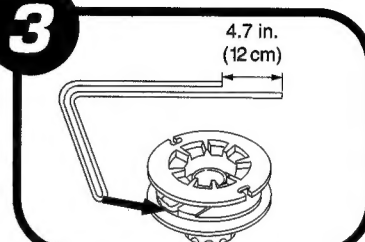**3**


3. Take out the spool and pull off the old line. Put one end of new line through the spool holes and pull it until the length is equal between each part of the line.

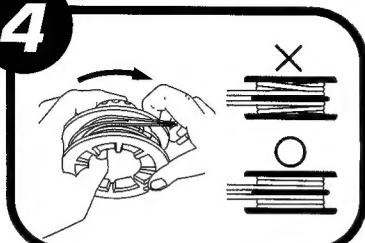**4**

4. Wind up the line in the correct direction as indicated on the spool. As shown on the right, do not wrap the line.

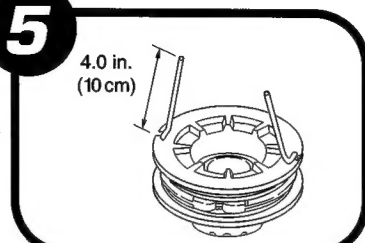**5**

5. Hook each end of the line in the slot on the edge of the spool, and then put the ends through the eyelets on the housing. Make sure that the spring and the washers are in place.

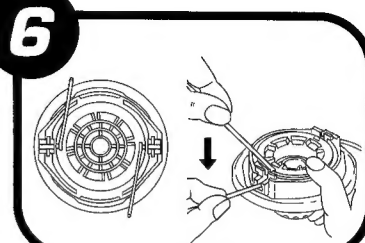**6**

6. While holding the spool against the housing, pull the line ends to release them from the slot. Line up the slot on the bottom cap with the hook on the housing, press the cap against the housing until it clicks.